


Pneumatic Tube Fittings

Feature

- One-Touch push-to-connect configuration allows an instant tubing connection.
- Smooth-Edge release sleeve design facilitates a quick tubing disconnection.
- Aesthetically pleasing nickel-plated metallic optional feature ensures anti-corrosion and anti-contamination properties of an extended product life.
- Pre-applied sealant on all external threads eliminates the additional sealing requirement.
- Internal and/of external flat-to-flat hexagonal configurations for both metric and inch specifications allow a proper tightening or directional orientation upon installation by using L key or allen wrench for the applicable model types.

Construction

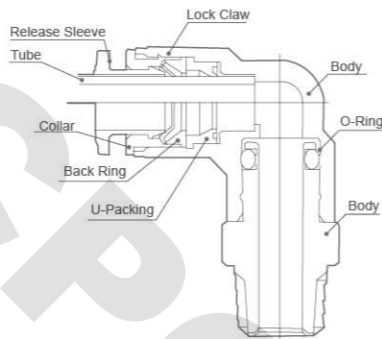

Specification

Fluid Type	Air, Vacuum
Operating Pressure	0~10.2Kg/cm ² (0~1.0Mpa)
Negative Pressure	-750mm Hg(10Torr)
Operating Temperature Range	0~60℃
Tube Material	Nylon and Polyurethane

(1)Model Type

(2)Tube Outer Diameter(ΦD)

Metric Tube						Inch Tube				
Code	04	06	08	10	12	14	16	1/4"	5/16"	3/8"
ΦD	4mm	6mm	8mm	10mm	12mm	14mm	16mm	1/4"	5/16"	3/8"

(3)Thread Type & Size

Metric Size

Metric Size			
Code	M5	M6	M8
Size	M5×0.8	M6×1	M8×1

(4)Body Color Code

- NO Code:Black Color
- GC:Grey Color

Ordering Code



Taper Pipe Thread

R(PT)Thread				
Code	01	02	03	04
Size	R1/8"	R1/4"	R3/8"	R1/2"

Inch Thread

G(PP)Thread				
Code	G01	G02	G03	G04
Size	G1/8"	G1/4"	G3/8"	G1/2"

NPT Thread

NPT Thread				
Code	N1	N2	N3	N4
Size	NPT1/8"	NPT1/4"	NPT3/8"	NPT1/2"

XPC

ΦD



T

MODEL(ΦD-T)

Tube(Metric)-Thread(R)		Tube(Inch)-Thread(R)		Tube(Inch)-Thread(NPT)		
XPC 04-M5	XPC 06-04	XPC 12-02	XPC 1/4-01	XPC 3/8-04	XPC 5/32-U	XPC 1/4-N2
XPC 04-M6	XPC 08-01	XPC 12-03	XPC 1/4-02	XPC 1/2-02	XPC 5/32-N1	XPC 1/4-N3
XPC 04-01	XPC 08-02	XPC 12-04	XPC 1/4-03	XPC 1/2-03	XPC 5/32-N2	XPC 5/16-N1
XPC 04-02	XPC 08-03	XPC 14-03	XPC 5/16-01	XPC 1/2-04	XPC 3/16-U	XPC 5/16-N2
XPC 06-M5	XPC 08-04	XPC 14-04	XPC 5/16-02		XPC 3/16-N1	XPC 5/16-N3
XPC 06-M6	XPC 10-01	XPC 16-03	XPC 5/16-03		XPC 3/16-N2	XPC 3/8-N1
XPC 06-01	XPC 10-02	XPC 16-04	XPC 3/8-01		XPC 3/16-N3	XPC 3/8-N2
XPC 06-02	XPC 10-03		XPC 3/8-02		XPC 1/4-U	XPC 3/8-N3
XPC 06-03	XPC 10-04		XPC 3/8-03		XPC 1/4-N1	XPC 3/8-N4

XPOC

ΦD



T

MODEL(ΦD-T)

Tube(Metric)-Thread(R)		Tube(Inch)-Thread(R)		Tube(Inch)-Thread(NPT)		
XPOC 04-M5	XPOC 06-03	XPOC 10-04	XPOC 1/4-01		XPOC 5/32-U	XPOC 3/8-N2
XPOC 04-M6	XPOC 08-01	XPOC 12-02	XPOC 1/4-02		XPOC 5/32-N1	XPOC 3/8-N3
XPOC 04-01	XPOC 08-02	XPOC 12-03	XPOC 5/16-01		XPOC 1/4-U	XPOC 3/8-N4
XPOC 04-02	XPOC 08-03	XPOC 12-04	XPOC 5/16-02		XPOC 1/4-N1	XPOC 1/2-N2
XPOC 06-M5	XPOC 08-04	XPOC 14-03	XPOC 5/16-03		XPOC 1/4-N2	XPOC 1/2-N3
XPOC 06-M6	XPOC 10-01	XPOC 14-04	XPOC 3/8-02		XPOC 5/16-N1	XPOC 1/2-N4
XPOC 06-01	XPOC 10-02	XPOC 16-03	XPOC 3/8-03		XPOC 5/16-N2	
XPOC 06-02	XPOC 10-03	XPOC 16-04	XPOC 3/8-04		XPOC 5/16-N3	

Pneumatic Tube Fittings

XPL



T

ΦD

MODEL(ΦD-T)

Tube(Metric)-Thread(R)			Tube(Inch)-Thread(R)		Tube(Inch)-Thread(NPT)		
XPL 04-M5	XPL 06-04	XPL 12-02	XPL 1/4-01	XPL 3/8-04	XPL 5/32-U	XPL 1/4-N2	XPL 1/2-N2
XPL 04-M6	XPL 08-01	XPL 12-03	XPL 1/4-02	XPL 1/2-02	XPL 5/32-N1	XPL 1/4-N3	XPL 1/2-N3
XPL 04-01	XPL 08-02	XPL 12-04	XPL 1/4-03	XPL 1/2-03	XPL 5/32-N2	XPL 5/16-N1	XPL 1/2-N4
XPL 04-02	XPL 08-03	XPL 14-03	XPL 5/16-01	XPL 1/2-04	XPL 3/16-U	XPL 5/16-N2	
XPL 06-M5	XPL 08-04	XPL 14-04	XPL 5/16-02		XPL 3/16-N1	XPL 5/16-N3	
XPL 06-M6	XPL 10-01	XPL 16-03	XPL 5/16-03		XPL 3/16-N2	XPL 3/8-N1	
XPL 06-01	XPL 10-02	XPL 16-04	XPL 3/8-01		XPL 3/16-N3	XPL 3/8-N2	
XPL 06-02	XPL 10-03		XPL 3/8-02		XPL 1/4-U	XPL 3/8-N3	
XPL 06-03	XPL 10-04		XPL 3/8-03		XPL 1/4-N1	XPL 3/8-N4	

XPLL



T

ΦD

MODEL(ΦD-T)

Tube(Metric)-Thread(R)			Tube(Inch)-Thread(R)		Tube(Inch)-Thread(NPT)		
XPLL 04-M5	XPLL 06-04	XPLL 12-02	XPLL 1/4-01		XPLL 5/32-U	XPLL 5/16-N2	
XPLL 04-M6	XPLL 08-01	XPLL 12-03	XPLL 1/4-02		XPLL 5/32-N1	XPLL 5/16-N3	
XPLL 04-01	XPLL 08-02	XPLL 12-04	XPLL 5/16-02		XPLL 3/16-N1	XPLL 3/8-N2	
XPLL 04-02	XPLL 08-03	XPLL 14-03	XPLL 3/8-02		XPLL 3/16-N2	XPLL 3/8-N3	
XPLL 06-M5	XPLL 08-04	XPLL 14-04	XPLL 3/8-03		XPLL 3/16-N3	XPLL 3/8-N4	
XPLL 06-M6	XPLL 10-01	XPLL 16-03			XPLL 1/4-N1	XPLL 1/2-N2	
XPLL 06-01	XPLL 10-02	XPLL 16-04			XPLL 1/4-N2	XPLL 1/2-N3	
XPLL 06-02	XPLL 10-03				XPLL 1/4-N3	XPLL 1/2-N4	
XPLL 06-03	XPLL 10-04				XPLL 5/16-N1		

XPLF



T

ΦD

MODEL(ΦD-T)

Tube(Metric)-Thread(R)			Tube(Inch)-Thread(R)		
XPLF 04-M5	XPLF 08-01	XPLF 12-03	XPLF 5/32-N1	XPLF 3/8-N3	
XPLF 04-M6	XPLF 08-02	XPLF 12-04	XPLF 3/16-N1	XPLF 1/2-N3	
XPLF 04-01	XPLF 08-03	XPLF 14-03	XPLF 3/16-N2	XPLF 1/2-N4	
XPLF 04-02	XPLF 08-04	XPLF 14-04	XPLF 1/4-N1		
XPLF 06-M5	XPLF 10-01	XPLF 16-03	XPLF 1/4-N2		
XPLF 06-M6	XPLF 10-02	XPLF 16-04	XPLF 5/16-N1		
XPLF 06-01	XPLF 10-03		XPLF 5/16-N2		
XPLF 06-02	XPLF 10-04		XPLF 5/16-N3		
XPLF 06-03	XPLF 12-02		XPLF 3/8-N2		

XPCF

ΦD



T

MODEL(ΦD-T)

Tube(Metric)-Thread(R)		Tube(Inch)-Thread(R)		Tube(Inch)-Thread(NPT)	
XPCF 04-01	XPCF 10-01	XPCF 1/4-01		XPCF 5/32-N1	XPCF 3/8-N2
XPCF 04-02	XPCF 10-02	XPCF 1/4-02		XPCF 5/32-N2	XPCF 3/8-N3
XPCF 06-01	XPCF 10-03	XPCF 5/16-01		XPCF 3/16-N1	XPCF 1/2-N2
XPCF 06-02	XPCF 10-04	XPCF 5/16-02		XPCF 3/16-N2	XPCF 1/2-N3
XPCF 06-03	XPCF 12-02	XPCF 3/8-02		XPCF 1/4-N1	
XPCF 08-01	XPCF 12-03	XPCF 3/8-03		XPCF 1/4-N2	
XPCF 08-02	XPCF 12-04			XPCF 5/16-N1	
XPCF 08-03	XPCF 16-03			XPCF 5/16-N2	
XPCF 08-04	XPCF 16-04			XPCF 5/16-N3	

XPB



T

ΦD

MODEL(ΦD-T)

Tube(Metric)-Thread(R)			Tube(Inch)-Thread(R)		Tube(Inch)-Thread(NPT)		
XPB 04-M5	XPB 06-04	XPB 12-02	XPB 1/4-01	XPB 3/8-04	XPB 5/32-U	XPB 1/4-N2	XPB 1/2-N2
XPB 04-M6	XPB 08-01	XPB 12-03	XPB 1/4-02	XPB 1/2-02	XPB 5/32-N1	XPB 1/4-N3	XPB 1/2-N3
XPB 04-01	XPB 08-02	XPB 12-04	XPB 1/4-03	XPB 1/2-03	XPB 5/32-N2	XPB 5/16-N1	XPB 1/2-N4
XPB 04-02	XPB 08-03	XPB 14-03	XPB 5/16-01	XPB 1/2-04	XPB 3/16-U	XPB 5/16-N2	
XPB 06-M5	XPB 08-04	XPB 14-04	XPB 5/16-02		XPB 3/16-N1	XPB 5/16-N3	
XPB 06-M6	XPB 10-01	XPB 16-03	XPB 5/16-03		XPB 3/16-N2	XPB 3/8-N1	
XPB 06-01	XPB 10-02	XPB 16-04	XPB 3/8-01		XPB 3/16-N3	XPB 3/8-N2	
XPB 06-02	XPB 10-03		XPB 3/8-02		XPB 1/4-U	XPB 3/8-N3	
XPB 06-03	XPB 10-04		XPB 3/8-03		XPB 1/4-N1	XPB 3/8-N4	

Pneumatic Tube Fittings

XPD



MODEL(ΦD-T)								
Tube(Metric)-Thread(R)			Tube(Inch)-Thread(R)			Tube(Inch)-Thread(NPT)		
XPD 04-M5	XPD 06-04	XPD 12-02	XPD 1/4-01	XPD 3/8-04	XPD 5/32-U	XPD 1/4-N2	XPD 1/2-N2	
XPD 04-M6	XPD 08-01	XPD 12-03	XPD 1/4-02	XPD 1/2-02	XPD 5/32-N1	XPD 1/4-N3	XPD 1/2-N3	
XPD 04-01	XPD 08-02	XPD 12-04	XPD 1/4-03	XPD 1/2-03	XPD 5/32-N2	XPD 5/16-N1	XPD 1/2-N4	
XPD 04-02	XPD 08-03	XPD 14-03	XPD 5/16-01	XPD 1/2-04	XPD 3/16-U	XPD 5/16-N2		
XPD 06-M5	XPD 08-04	XPD 14-04	XPD 5/16-02		XPD 3/16-N1	XPD 5/16-N3		
XPD 06-M6	XPD 10-01	XPD 16-03	XPD 5/16-03		XPD 3/16-N2	XPD 3/8-N1		
XPD 06-01	XPD 10-02	XPD 16-04	XPD 3/8-01		XPD 3/16-N3	XPD 3/8-N2		
XPD 06-02	XPD 10-03		XPD 3/8-02		XPD 1/4-U	XPD 3/8-N3		
XPD 06-03	XPD 10-04		XPD 3/8-03		XPD 1/4-N1	XPD 3/8-N4		

XPX



MODEL(ΦD-T)								
Tube(Metric)-Thread(R)			Tube(Inch)-Thread(R)			Tube(Inch)-Thread(NPT)		
XPX 04-M5	XPX 06-04	XPX 12-02	XPX 1/4-01	XPX 3/8-04	XPX 5/32-U	XPX 1/4-N2	XPX 1/2-N2	
XPX 04-M6	XPX 08-01	XPX12-03	XPX 1/4-02	XPX 1/2-02	XPX 5/32-N1	XPX 1/4-N3	XPX 1/2-N3	
XPX 04-01	XPX 08-02	XPX 12-04	XPX 1/4-03	XPX 1/2-03	XPX 5/32-N2	XPX 5/16-N1	XPX 1/2-N4	
XPX 04-02	XPX 08-03		XPX 5/16-01	XPX 1/2-04	XPX 3/16-U	XPX 5/16-N2		
XPX 06-M5	XPX 08-04		XPX 5/16-02		XPX 3/16-N1	XPX 5/16-N3		
XPX 06-M6	XPX 10-01		XPX 5/16-03		XPX 3/16-N2	XPX 3/8-N1		
XPX 06-01	XPX 10-02		XPX 3/8-01		XPX 3/16-N3	XPX 3/8-N2		
XPX 06-02	XPX 10-03		XPX 3/8-02		XPX 1/4-U	XPX 3/8-N3		
XPX 06-03	XPX 10-04		XPX 3/8-03		XPX 1/4-N1	XPX 3/8-N4		

XPKB



MODEL(ΦD-T)	
Tube(Inch)-Thread(R)	
XPKB 04-01	
XPKB 04-02	
XPKB 06-01	
XPKB 06-02	
XPKB 06-03	
XPKB 08-01	
XPKB 08-02	
XPKB 08-03	

XPKD



MODEL(ΦD-T)	
Tube(Inch)-Thread(R)	
XPKD 06-04-01	
XPKD 08-04-02	
XPKD 08-06-02	
XPKD 10-08-03	
XPKD 3/16-5/32-N1	
XPKD 1/4-5/32-N1	
XPKD 5/16-5/32-N2	
XPKD 5/16-1/4-N2	
XPKD 3/8-5/16-N3	

XPH



MODEL(ΦD-T)					
Tube(Metric)-Thread(R)		Tube(Inch)-Thread(R)		Tube(Inch)-Thread(NPT)	
XPH 04-M5	XPH 08-01	XPH 12-04	XPH 1/4-05	XPH 5/32-U	XPH 5/16-N3
XPH 04-M6	XPH 08-02		XPH 1/4-01	XPH 5/32-N1	XPH 3/8-N2
XPH 04-01	XPH 08-03		XPH 1/4-02	XPH 3/16-U	XPH 3/8-N3
XPH 04-02	XPH 08-04		XPH 5/16-01	XPH 3/16-N1	XPH1/2-N3
XPH 06-M5	XPH 10-02		XPH 5/16-02	XPH 3/16-N2	XPH1/2-N4
XPH 06-M6	XPH 10-03		XPH 5/16-03	XPH 1/4-N1	
XPH 06-01	XPH 10-04		XPH 3/8-02	XPH 1/4-N2	
XPH 06-02	XPH 12-02		XPH 3/8-03	XPH 5/16-N1	
XPH 06-03	XPH 12-03			XPH 5/16-N2	

XPHF



MODEL(ΦD-T)					
Tube(Metric)-Thread(R)		Tube(Inch)-Thread(R)		Tube(Inch)-Thread(NPT)	
XPHF 04-M5					
XPHF 04-M6					
XPHF 04-01					
XPHF 04-02					
XPHF 06-M5					
XPHF 06-M6					
XPHF 06-01					
XPHF 06-02					
XPHF 06-03					
XPHF 08-01					
XPHF 08-02					
XPHF 08-03					
XPHF 08-04					
XPHF 10-02					
XPHF 10-03					
XPHF 10-04					
XPHF 12-02					
XPHF 12-03					
XPHF 1/4-M5					
XPHF 1/4-01					
XPHF 1/4-02					
XPHF 5/16-01					
XPHF 5/16-02					
XPHF 5/16-03					
XPHF 3/8-02					
XPHF 3/8-03					
XPHF 5/32-U					
XPHF 5/32-N1					
XPHF 3/16-U					
XPHF 3/16-N1					
XPHF 3/16-N2					
XPHF 1/4-N1					
XPHF 1/4-N2					
XPHF 3/8-N1					
XPHF 5/16-N1					
XPHF 5/16-N2					
XPHF 5/16-N3					
XPHF 3/8-N2					
XPHF 3/8-N3					
XPHF 1/2-N3					
XPHF 1/2-N4					
XPHF 1/2-N3					
XPHF 1/2-N4					
XPHF 5/16-N1					
XPHF 5/16-N2					

Pneumatic Tube Fittings

XPMF



MODEL(ΦD-T)				
Tube(Metric)-Thread(RC)		Tube(Inch)-Thread(NPT)		
XPMF 04-01	XPMF 10-01	XPMF 5/32-N1	XPMF 3/8-N3	
XPMF 04-02	XPMF 10-02	XPMF 3/16-N1	XPMF 1/2-N3	
XPMF 06-01	XPMF 10-03	XPMF 3/16-N2	XPMF 1/2-N4	
XPMF 06-02	XPMF 10-04	XPMF 1/4-N1		
XPMF 06-03	XPMF 12-02	XPMF 1/4-N2		
XPMF 08-01	XPMF 12-03	XPMF 5/16-N1		
XPMF 08-02	XPMF 12-04	XPMF 5/16-N2		
XPMF 08-03	XPMF 14-04	XPMF 5/16-N3		
XPMF 08-04	XPMF 16-04	XPMF 3/8-N2		

XPGJ



MODEL(ΦD1-ΦD2)		
Tube(Metric)-Thread(R)	Tube(Inch)-Thread(R)	Tube(Inch)-Thread(NPT)
XPGJ 06-04	XPGJ 08-1/4	XPGJ 1/4-5/32
XPGJ 08-04	XPGJ 10-1/4	XPGJ 5/16-5/32
XPGJ 08-06	XPGJ 10-5/16	XPGJ 5/16-1/4
XPGJ 10-06	XPGJ 12-1/4	XPGJ 3/8-1/4
XPGJ 10-08	XPGJ 12-5/16	XPGJ 3/8-5/16
XPGJ 12-06		XPGJ 1/2-1/4
XPGJ 12-08		XPGJ 1/2-5/16
XPGJ 12-10		XPGJ 1/2-3/8

XPLJ



MODEL(ΦD)	
Tube(Metric)	Tube(Inch)
XPLJ 04	XPLJ 5/32
XPLJ 06	XPLJ 3/16
XPLJ 08	XPLJ 1/4
XPLJ 10	XPLJ 5/16
XPLJ 12	XPLJ 3/8
	XPLJ 1/2

XPLGJ



MODEL(ΦD1-ΦD2)	
Tube(Metric)	Tube(Inch)
XPLGJ 06-04	XPLGJ 3/16-5/32
XPLGJ 08-06	XPLGJ 1/4-5/32
XPLGJ 10-08	XPLGJ 1/4-3/16
XPLGJ 12-10	XPLGJ 5/16-1/4
	XPLGJ 3/8-5/16
	XPLGJ 1/2-3/8

XPYJ



MODEL(ΦD)	
Tube(Metric)	Tube(Inch)
XPYJ 04	XPYJ 5/32
XPYJ 06	XPYJ 3/16
XPYJ 08	XPYJ 1/4
XPYJ 10	XPYJ 5/16
XPYJ 12	XPYJ 3/8
	XPYJ 1/2

XPWJ



MODEL(ΦD1-ΦD2)	
Tube(Metric)	Tube(Inch)
XPWJ 06-04	XPWJ 1/4-5/32
XPWJ 08-06	XPWJ 5/16-1/4
XPWJ 10-08	XPWJ 3/8-5/16
XPWJ 12-10	XPWJ 1/2-3/8

XPIJ



MODEL(ΦD)	
Tube(Metric)	Tube(Inch)
XPIJ 04	XPIJ 5/32
XPIJ 06	XPIJ 3/16
XPIJ 08	XPIJ 1/4
XPIJ 10	XPIJ 5/16
XPIJ 12	XPIJ 3/8
XPIJ 16	XPIJ 1/2


XPkJ



MODEL(ΦD1-ΦD2)	
Tube(Metric)	Tube(Inch)
XPkJ 06-04	XPkJ 3/16-5/32
XPkJ 08-04	XPkJ 1/4-5/32
XPkJ 08-06	XPkJ 5/16-5/32
XPkJ 10-06	XPkJ 5/16-3/16
XPkJ 10-08	XPkJ 5/16-1/4
	XPkJ 3/8-1/4
	XPkJ 3/8-5/16

Pneumatic Tube Fittings

XPDJ




ΦD

MODEL(ΦD)

Tube(Metric)	Tube(Inch)
XPDJ 04	XPDJ 08-06
XPDJ 06	XPDJ 10-08
XPDJ 08	XPDJ 12-10
XPDJ 10	
XPDJ 12	
XPDJ 06-04	

XPSJ



ΦD1 ΦD2

MODEL(ΦD1-ΦD2)

Tube(Metric)	Tube(Inch)
XPSJ 06-04	XPSJ 1/4-5/32
XPSJ 08-06	XPSJ 5-16-1/4
XPSJ 10-08	XPSJ 3/8-5-16
XPSJ 12-10	XPSJ 1-2-3/8

XPTJ



ΦD1 ΦD2

MODEL(ΦD1-ΦD2)

Tube(Metric)	Tube(Inch)
XPTJ 06-04	XPTJ 1/4-5/32
XPTJ 08-06	XPTJ 5/16-1/4
XPTJ 10-08	XPTJ 3/8-5/16
XPTJ 12-10	XPTJ 1/2-3/8

XPP




ΦD

MODEL(ΦD)

Tube(Metric)	Tube(Inch)
XPP 04	XPP 5/32
XPP 06	XPP 3/16
XPP 08	XPP 1/4
XPP 10	XPP 5/16
XPP 12	XPP 3/8
XPP 16	XPP 1/2

XPIG




ΦD1 ΦD2

MODEL(ΦD1-ΦD2)

Tube(Metric)	Tube(Inch)
XPIG 06-04	XPIG 3/16-5/32
XPIG 08-06	XPIG 1/4-5/32
XPIG 10-08	XPIG 1/4-3/16
XPIG 12-10	XPIG 5/16-1/4
XPIG 16-12	XPIG 3/8-5/16
	XPIG 1/2-3/8

XPM




ΦD

MODEL(ΦD)

Tube(Metric)	Tube(Inch)
XPM 04	XPM 5/32
XPM 06	XPM 3/16
XPM 08	XPM 1/4
XPM 10	XPM 5/16
XPM 12	XPM 3/8
XPM 14	XPM 1/2
XPM 16	

XPZA




ΦD

MODEL(ΦD)

Tube(Metric)	Tube(Inch)
XPZA 04	XPZA 5/32
XPZA 06	XPZA 3/16
XPZA 08	XPZA 1/4
XPZA 10	XPZA 5/16
XPZA 12	XPZA 3/8
	XPZA 1/2

XPKG



ΦD1 ΦD2

MODEL(ΦD1-ΦD2)

Tube(Metric)	Tube(Inch)
XPKG 06-04	XPKG 3/16-5/32
XPKG 08-04	XPKG 1/4-5/32
XPKG 08-06	XPKG 5/16-5/32
XPKG 10-06	XPKG 3/16-3/16
XPKG 10-08	XPKG 5/16-1/4
	XPKG 3/8-1/4
	XPKG 3/8-5/16

XPK



ΦD

MODEL(ΦD)

Tube(Metric)	Tube(Inch)
XPK 04	XPK 5/32
XPK06	XPK 3/16
XPK 08	XPK 1/4
	XPK 5/16

XPLM




ΦD

MODEL(ΦD)

Tube(Metric)	Tube(Inch)
XPLM 04	
XPLM06	
XPLM08	
XPLM10	
XPLM12	

Pneumatic Tube Fittings

XPPF




ΦD

MODEL(ΦD)

Tube(Metric)
XPPF04
XPPF06
XPPF07
XPPF08
XPPF10
XPPF12

XPU




ΦD

MODEL(ΦD)

Tube(Metric)	Tube(Inch)
XPU 04	XPU 5/32
XPU 06	XPU 3/16
XPU 08	XPU 1/4
XPU 10	XPU 5/16
XPU 12	XPU 3/8
XPU 14	XPU 1/2
XPU 16	

XPV




ΦD

MODEL(ΦD)

Tube(Metric)	Tube(Inch)
XPV 04	XPV 5/32
XPV 06	XPV 3/16
XPV 08	XPV 1/4
XPV 10	XPV 5/16
XPV 12	XPV 3/8
XPV 14	XPV 1/2
XPV 16	

XPE




ΦD

MODEL(ΦD)

Tube(Metric)	Tube(Inch)
XPE 04	XPE 5/32
XPE 06	XPE 3/16
XPE 08	XPE 1/4
XPE 10	XPE 5/16
XPE 12	XPE 3/8
XPE 14	XPE 1/2
XPE 16	

XPY




ΦD

MODEL(ΦD-T)

Tube(Metric)	Tube(Inch)
XPY 04	XPY 5/32
XPY 06	XPY 3/16
XPY 08	XPY 1/4
XPY 10	XPY 5/16
XPY 12	XPY 3/8
	XPY 1/2

XPG




ΦD1 ΦD2

MODEL(ΦD1-ΦD2)

Tube(Metric)	Tube(Inch)
XPG 06-04	XPG 3/16-5/32
XPG 08-04	XPG 1/4-5/32
XPG 08-06	XPG 1/4-3/16
XPG 10-06	XPG 5/16-1/4
XPG 10-08	XPG 3/8-5/16
XPG 12-10	XPG 1/2-3/8
XPG 16-12	
XPG 16-14	

XPGE




ΦD1 ΦD2

MODEL(ΦD1-ΦD2)

Tube(Metric)	Tube(Inch)
XPGE 06-04	XPGE 1/4-5/32
XPGE 08-06	XPGE 5/16-1/4
XPGE 10-08	XPGE 3/8-5/16
XPGE 12-10	XPGE 1/2-3/8
XPGE 16-12	

XPEG




ΦD1 ΦD2

MODEL(ΦD1-ΦD2)

Tube(Metric)	Tube(Inch)
XPEG 06-04	XPEG 1/4-5/32
XPEG 08-06	XPEG 5/16-1/4
XPEG 10-08	XPEG 3/8-5/16
XPEG 12-10	XPEG 1/2-3/8
XPEG 16-12	

XPW



ΦD1 ΦD2

MODEL(ΦD)

Tube(Metric)	Tube(Inch)
XPW 06-04	XPW 3/16-5/32
XPW 08-06	XPW 1/4-5/32
XPW 10-08	XPW 1/4-3/16
XPW 12-10	XPW 5/16-1/4
	XPW 3/8-5/16
	XPW 1/2-3/8